

Proprietary Information

The information in this guide is intended to be used as a reference to parts and their locations to aid the owner, operator, and mechanics using this piece of equipment. This document in any form is not to be copied, sold, or used as an engineering document to construct, modify, or design any such equipment. All information and drawings herein belong exclusively to Curry Supply Company and may not be duplicated in any way without prior written consent from Curry Supply Company.

Disclaimer

The information in this guide may not reflect the full configuration of your vehicle. The parts displayed are for general reference and any "custom" additions may not be fully shown.



YOUR JOBS.
OUR TRUCKS.



OFF-ROAD WATER TRUCK OPERATIONS GUIDE

DOCUMENT NUMBER 100-001

STOP!

You must read this document before attempting to operate this vehicle. Failure to do so may void your warranty and can result in serious injury or death.

PARTS

800.567.5127


WARRANTY/SERVICE

800.345.2829

1477 Degol Industrial Drive
Hollidaysburg, PA 16648

service@currysupply.com • CurrySupply.com

HYDRANT FILL

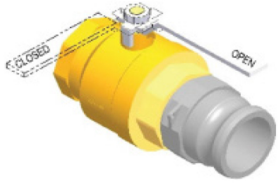

VALVE OPERATION

VALVES CAN BE OPENED OR CLOSED BY HAND TO ALLOW OR RESTRICT WATER FLOW.

OPEN – HANDLE ALIGNS WITH THE TUBE OR HOSE.

CLOSED – HANDLE IS PERPENDICULAR OR AT 90 DEGREES, WITH THE TUBE OR HOSE


HYDRANT FILL

CONNECT A FILL HOSE TO THE FILL TUBE CONNECTOR (A)

OPEN THE BALL VALVE BY ROTATING THE HANDLE (B)

TURN THE WATER SOURCE ON TO FILL THE TANK VIA THE FILL TUBE (C).

MONITOR THE SIGHT TUBE ON THE REAR OF THE TANK TO REACH THE DESIRED WATER LEVEL (AT LEAST 1/4 TANK FULL FOR OPERATION)

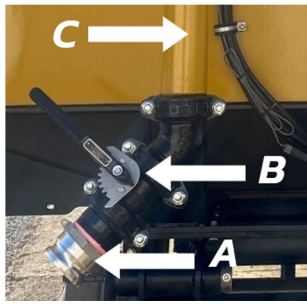

MOBILE SPRAY HEAD OPERATION

NOTE: CHECK WATER LEVEL BEFORE OPERATION

WITH THE TRUCK IN PARK, START THE ENGINE.

BE SURE TO CHECK YOUR SURROUNDINGS BEFORE ACTIVATING

PRESS A SPRAY HEAD(S) BUTTON ON THE TOUCH PAD TO OPEN IT. THE BUTTON LIGHT WILL COME ON AND THE OUTPUT NUMBER WILL CHANGE FROM 0 TO 1

PRESS THE "WATER PUMP" BUTTON TO TURN IT ON.

BEGIN DRIVING SLOWLY, WATER WILL BEGIN TO SPRAY FROM THE SELECTED SPRAY HEAD.

TO SWITCH SPRAY HEADS, OPEN NEWLY DESIRED SPRAY VALVE WHILE THE PREVIOUSLY SELECTED ONE IS STILL OPEN.

CLOSE PREVIOUS VALVE IF NO LONGER NEEDED.

WHEN FINISHED SPRAYING, CLOSE WATER PUMP, THEN CLOSE SPRAY HEAD(S).

WATER CANNON – TURN ON "CANNON POWER" AND USE SAME INSTRUCTIONS ABOVE



WATER PUMP

REAR HOSE OPERATION

NOTE: CHECK WATER LEVEL BEFORE OPERATION

ENSURE THE TRUCK IS IN PARK WITH THE PARKING BRAKE APPLIED AND START THE ENGINE.

OPEN THE HOSE REEL ON THE TOUCH PAD.

TURN ON THE "WATER PUMP" ON THE TOUCHPAD.

GO TO THE REAR OF THE TRUCK TO THE HOSE REEL, AND ENSURE THE HOSE IS CONNECTED TO THE SPAY BAR.

ENSURE THE HOSE NOZZLE IS CLOSED (HEAD ROTATES OPEN TO CLOSE).

OPEN THE HAND VALVE (A) TO ALLOW WATER TO FILL THE HOSE


PULL THE REEL LOCKING PIN (C), THEN UNWIND HOSE TO DESIRED LENGTH WITH HANDLE.

ROTATE THE HOSE NOZZLE OPEN TO SPRAY WATER FROM HOSE.

WHEN FINISHED SPRAYING, CLOSE THE HOSE NOZZLE, TURN OFF THE WATER PUMP, AND TURN OFF HOSE REEL ON TOUCH PAD.

CLOSE THE HAND VALVE (A)

REEL HOSE BACK IN USING THE HAND CRANK (B) AND SET LOCKING PIN (C).

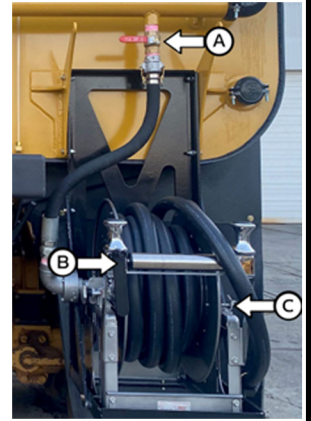

HOSE REEL

DRAINING OPERATIONS

TO DRAIN THE WATER TANK, PRESS THE DUMP VALVE BUTTON ON THE TOUCHPAD.

WATER WILL EMPTY FROM THE DUMP VALVE ON THE REAR BOTTOM OF THE TANK.

THE WATER PUMP DOES NOT NEED TO BE ON FOR THE DUMP VALVE TO OPERATE.

FOR BEST RESULTS, PARK TRUCK ON A SLIGHT INCLINE FACING UPHILL.



DUMP VALVE



Scan for Product Support & Operator Manuals

YOUR JOBS.
OUR TRUCKS.